

Mast Tuning Guide Hanse 350

TWS (True wind speed)	Headstay turnbuckle	Rake cm	V Using Tension Gauge	D1. Using Tension Gauge	D2. Using Tension Gauge	Mast Butt pos. cm (J measurement)
0-30	NA	228-230	31	24	14	428
			Use Loosegauge model: PT-3m	Use Loosegauge model: PT-3m	Use Loosegauge model: PT-3m	

Rig setup

1. Deck position for mast: Centerline intersection deck/forestay to forward edge mast = 428 cm (J. measurement)



2. Headstay datum: Top bas swing to forestay with center halyard to forestay




Better by Design

3. Mark your forestay and use that as reference mark.



4. Measure from mark on forstay to the intersection deck/forestay.
This setting should be: **228 cm**.

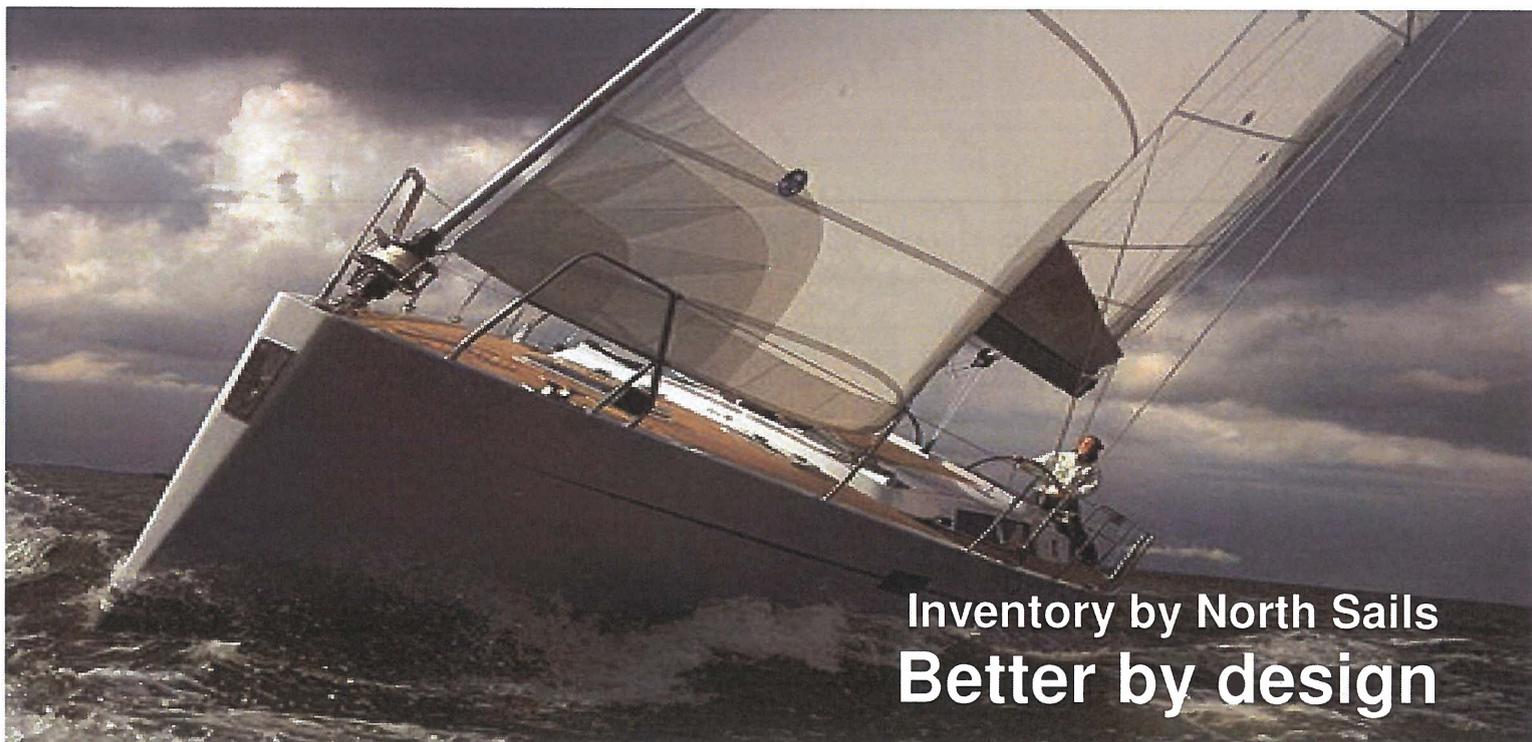

Inventory by North Sails
Better by design